 
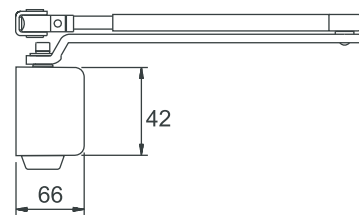 



JUSTOR TP 1-6

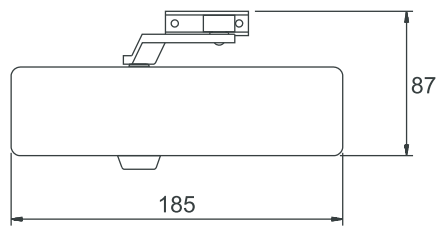

MOD.

TP 2 - 4

 TP 4 - 6

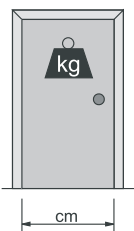

EN

cm

kg

2

3

4

4

5

6

85

95

110

110

125

140

40

 
 
 
 
 
60

80

80

100

120






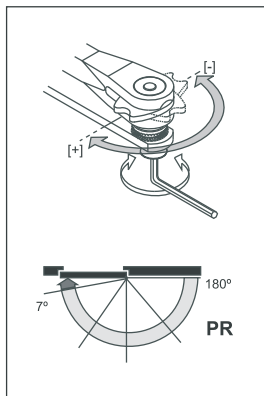
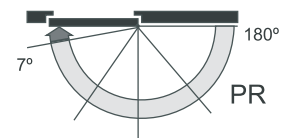
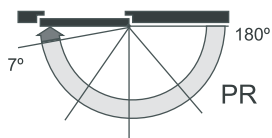
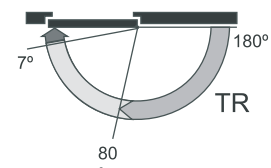
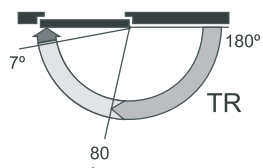



FF : Freno a la apertura / Fre a l'obertura / Opening camping / Frein à l'ouverture / Freno in apertura / Öffnungsdämpfung

TR : Cierre retardado / Tancament retardat / Delayed closing / Fermeture retardée / Chiusura ritardata / Verlangsamende Schließe


PR : Palanca de retención / Palanca de retenció / Hold Open Arm / Bras à retention / Braccio con regolazione / Stange "Hold Open"

           ACCESORIOS
 ACCESSORIS
 ACCESSORIES
 ACCESSOIRES
 ACCESSORI
 ZUBEHÖR

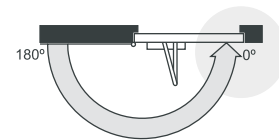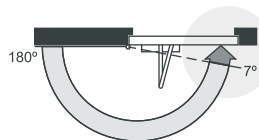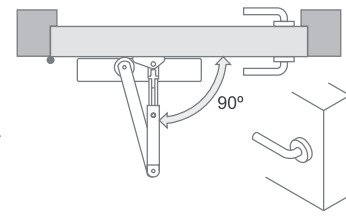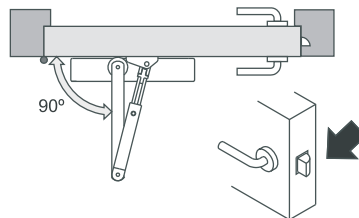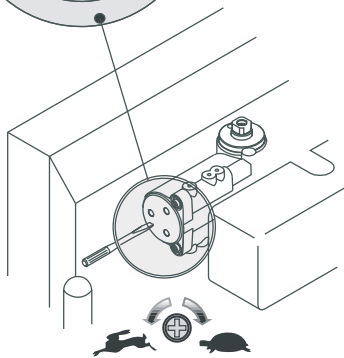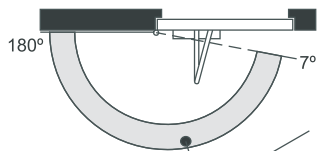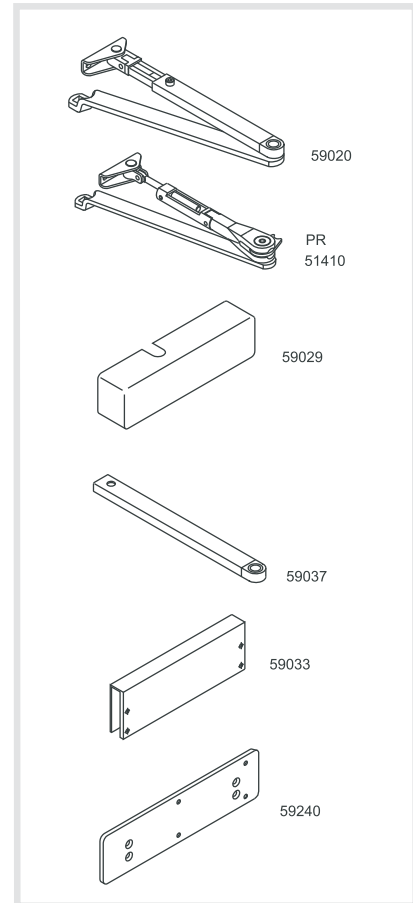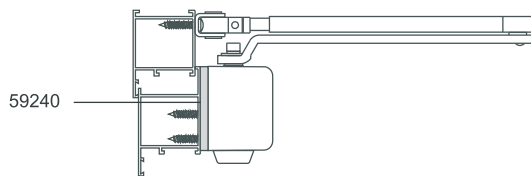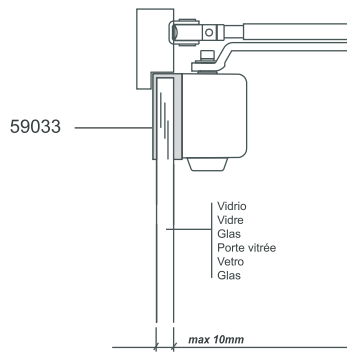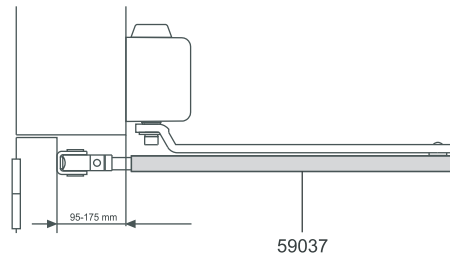


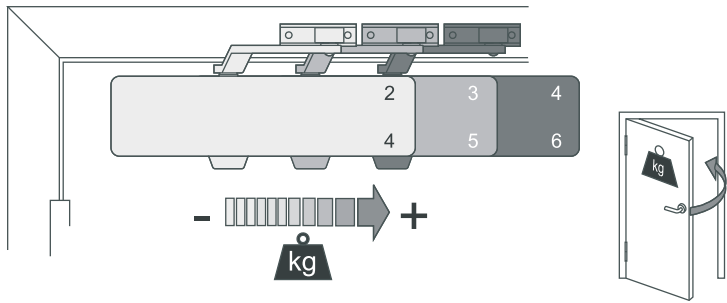

 Válvula termoconstante
 Válvula termoconstant
 Thermo-constant valve
 Soupape thermoconstante
 Valvola termocostante
 Thermkonstant Ventil

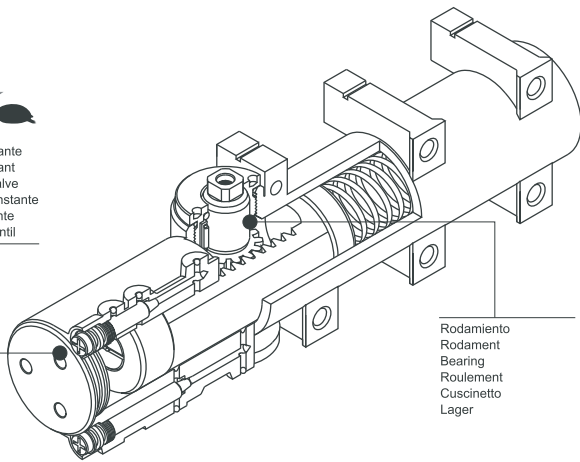

 Rodamiento
 Rodament
 Bearing
 Roulement
 Cuscinetto
 Lager

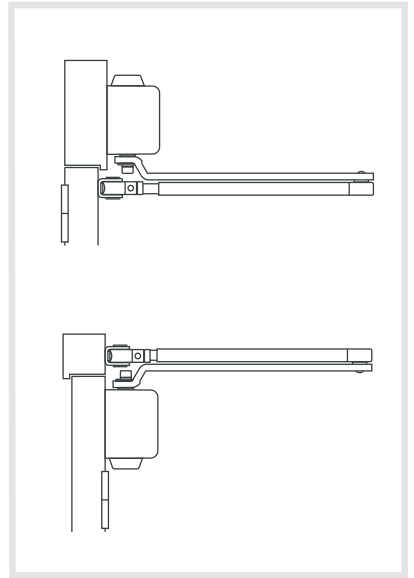

Plata - Silver - Argent - Argento - Silber

Oro - Or - Gold

Bronce - Bronze - Bronzo

Negro - Negre - Black - Noir - Nero - Schwarz

Blanco - Blanc - White - Bianco - Weiß

